This folder contains FOUR sets of

MOVING PICTURES

for your Santa's

MOVING PICTURE MACHINE

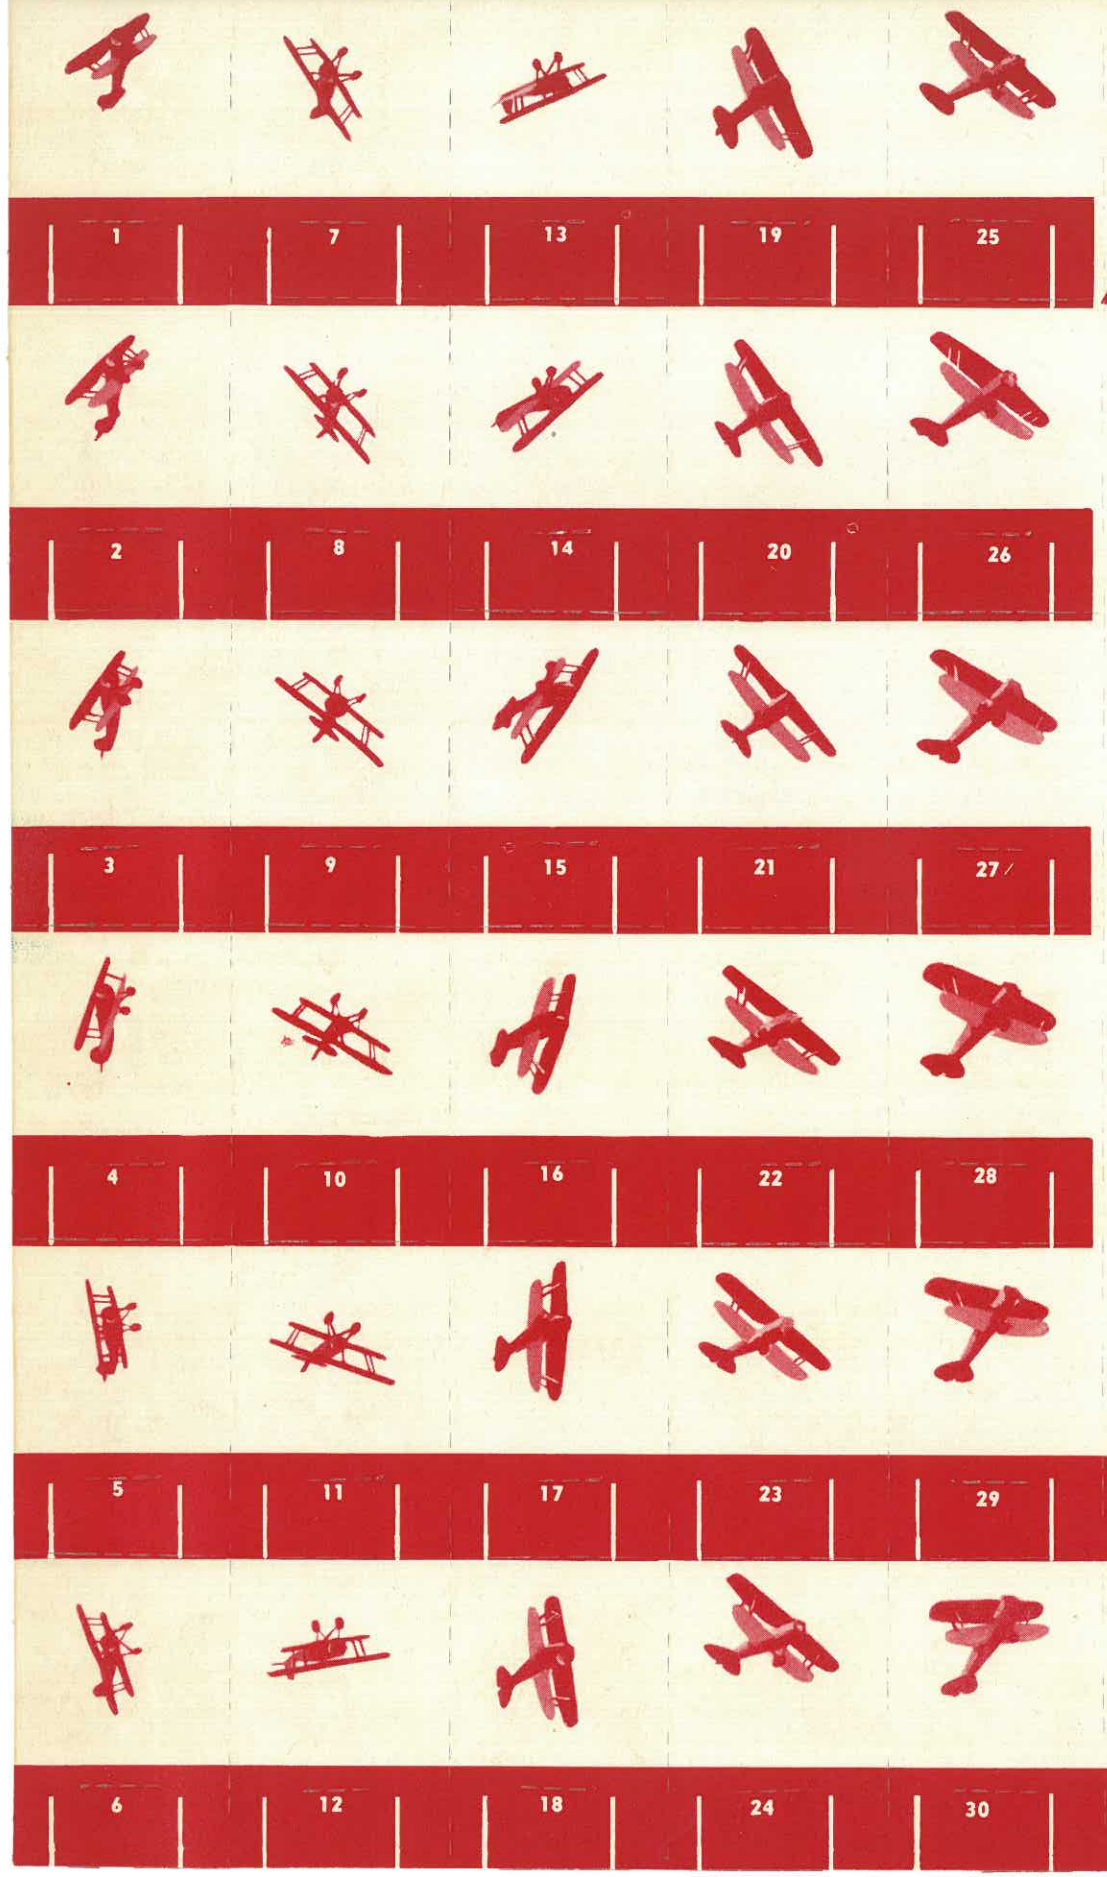

SET ONE "THE BARREL ROLL"

SET TWO IS ON OTHER SIDE

A set of 32 pictures is printed on each page of this folder. Fold pictures on perforated lines and gently pull them apart as shown in sketch A.

Next, stack pictures in numerical order. Begin with No. 32 on the bottom and end with No. 1 on the top. Then insert pictures into reel. See sketch B.

NOTE: There are four sets of pictures in this folder. Your Moving Picture Machine reel holds only two sets at one time. When you have seen your first two sets of pictures, you can take them out of the reel and put the other two sets in. Remove the pictures carefully to avoid tearing or bending. In inserting or taking pictures out of reel, be sure to keep the pictures Sets 1 and 2 separate from Sets 3 and 4.

SEE OTHER SIDE

SET THREE "PLAY BALL"

SET FOUR IS ON OTHER SIDE

Begin with picture 1 and insert it into slots numbered 1 on both wheels; next, insert picture 2 into slot 2 on the numbered wheel and into corresponding slot on other wheel, etc. See sketch C.
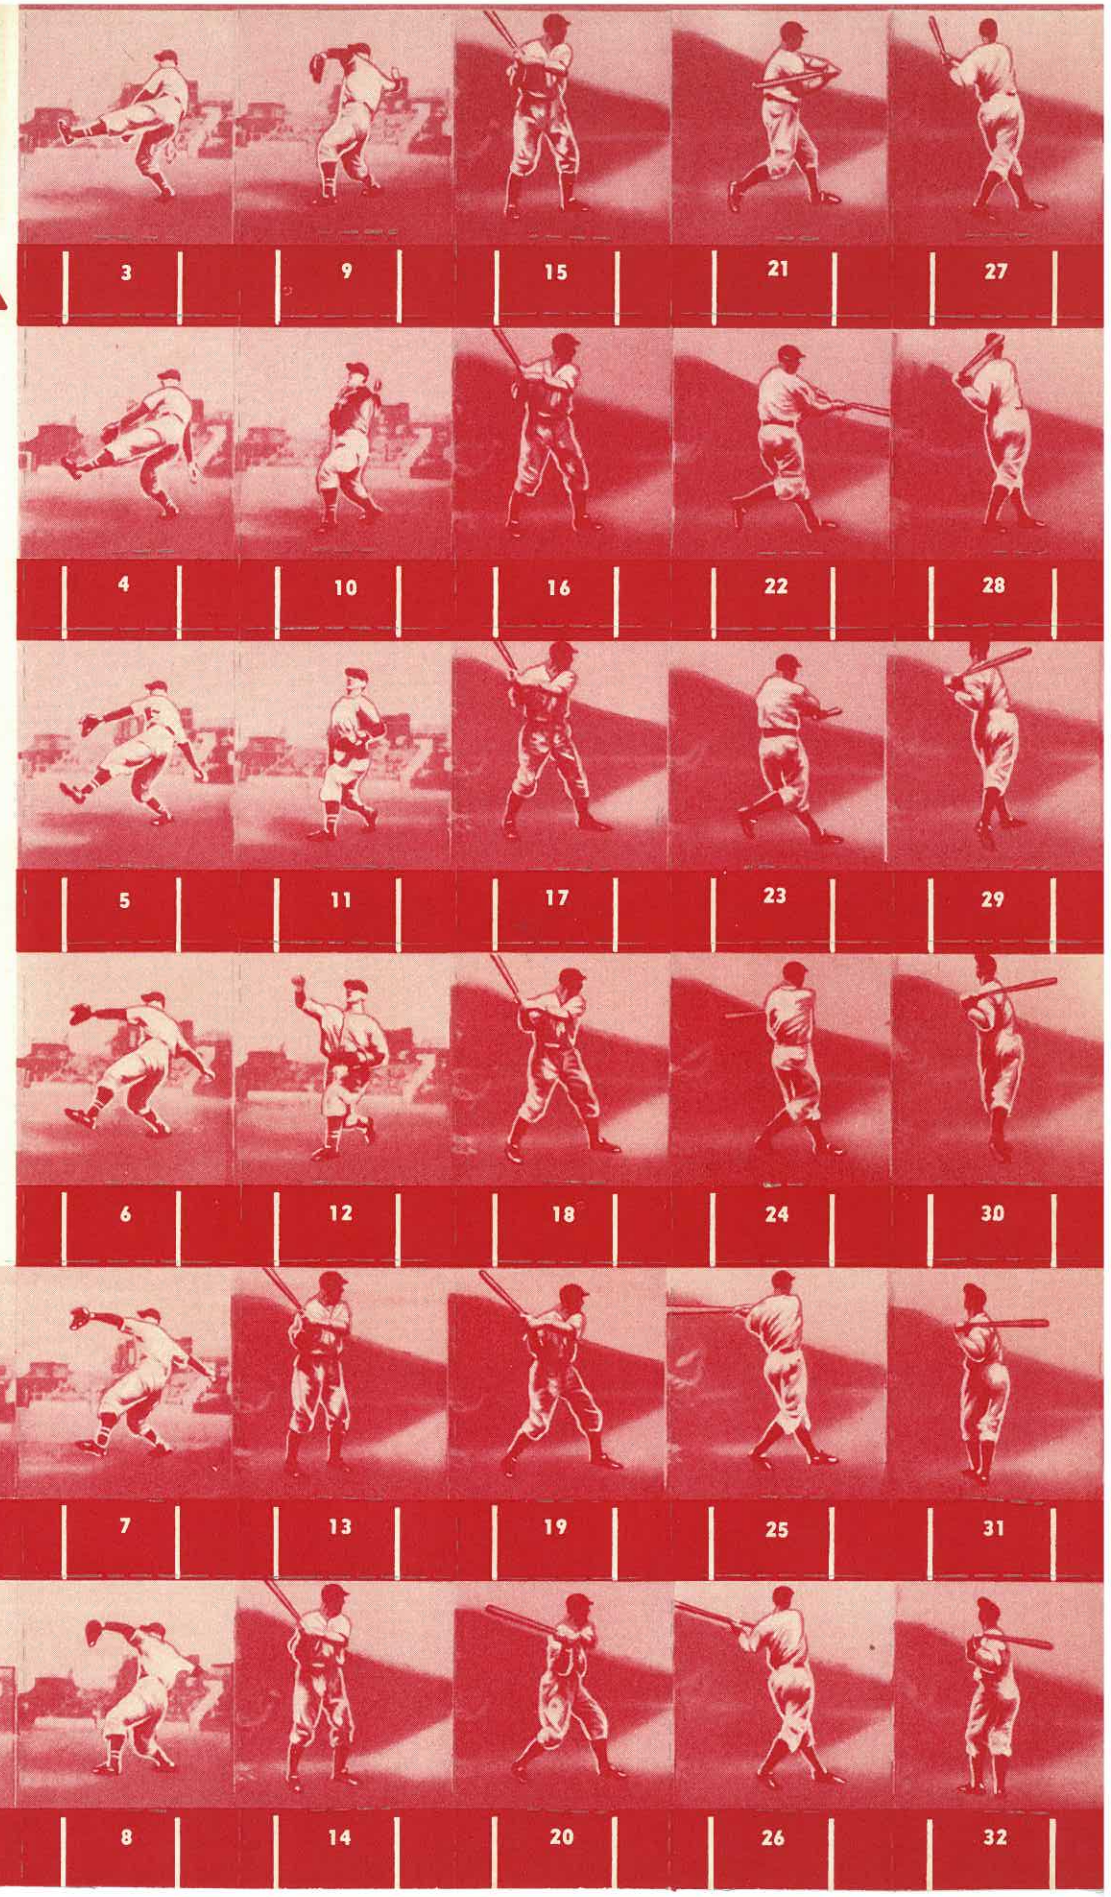
Insert numerically around wheel in direction of arrow, with numbered side of pictures facing direction of arrow. Insert pictures into slots of both wheels, one edge at a time. See that slots in wheels fit over white lines on bottom of picture. Picture should be all the way down in slot. Sketch D shows completed reel.